




For more information about how to use the mobile phone, please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade etc.

Table of contents

1	Your mobile phone	3
2	Text input	14
3	Phone call	16
4	Contacts	17
5	Messaging	18
6	Getting connected	20
7	Locate my location using GPS satellites	22
8	Data backup	23
9	Factory data reset	24
10	Applications	24
11	Making the most of your mobile phone	25

Your mobile phone

1.1 Keys and connectors

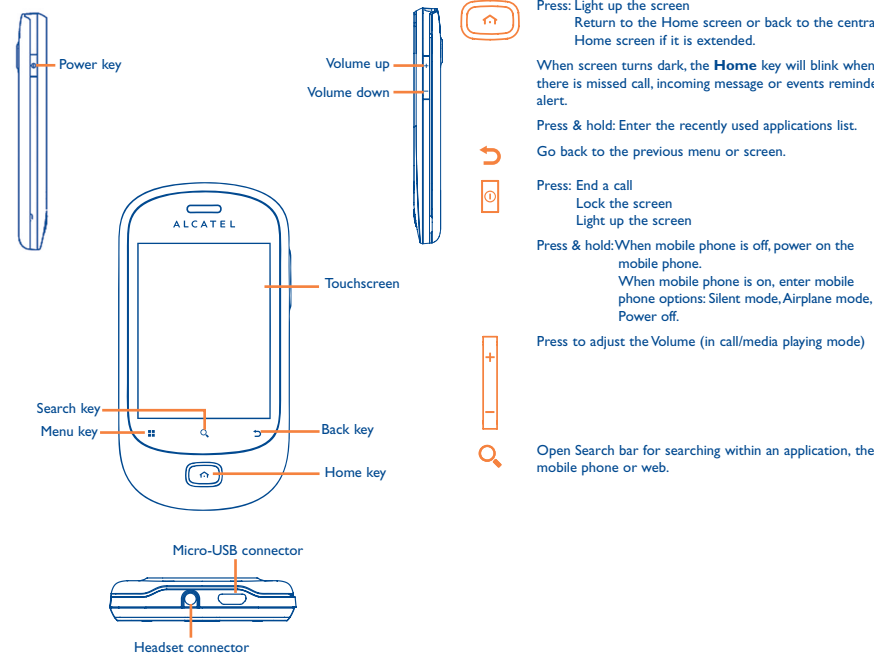

3


Notification icons

	New Gmail message		More notifications are hidden
	New text or multimedia message		Call in progress (green)
	Problem with text or multimedia message delivery		Call in progress using Bluetooth headset (blue)
	New Google Talk message		Missed call
	New voicemail		Call on hold
	Upcoming event		Call forwarding is on
	Data is synchronizing		Uploading data
	Problem with sign-in or synchronization		Downloading data
	microSD card is full		Download finished
	No microSD card installed		An open Wi-Fi network is available
	Connected to VPN		Mobile phone is connected via USB cable
	Disconnected from VPN		Radio is on
	Song is playing		System update available
	USB tethering on		Portable Wi-Fi hotspot on
	Both USB tethering and portable hotspot on		

11

Notification panel

Touch and drag down the Status bar or press **Menu** key and touch **Notifications** to open the notification panel. Touch and drag up to close it.

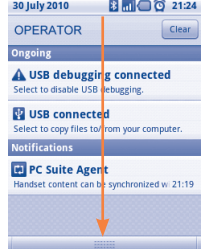

Touch **Clear** to clear all event-based notifications (other ongoing notifications will remain).

1.3.3 Search bar

The mobile phone provides a Search function which can be used to locate information within applications, the mobile phone or the web.

1.3.4 Lock/Unlock your screen

To protect your mobile phone and privacy, you can lock the mobile phone screen by creating a variety of patterns, PIN or password etc.

1.3.5 Personalize your home screen

Touch and hold an empty area or press **Menu** key and touch **Add** on the Home screen, you can add shortcuts, widgets or folders to the Home screen.

12

1.3.7 Volume adjustment

You can set ringer, media and mobile phone ringtone volume to your preference by **Volume up/down** key, or **Settings** menu.

13

1.2 Getting started

1.2.1 Set-up

- On Home screen, press to quickly access **Settings** menu or Notification panel; to launch quick search; to customize your Home screen by adding applications or changing wallpaper/theme.
 - On other screens, press to view options list.
- Press: Light up the screen
Return to the Home screen or back to the central Home screen if it is extended.
- When screen turns dark, the **Home** key will blink when there is missed call, incoming message or events reminder alert.
- Press & hold: Enter the recently used applications list.
Go back to the previous menu or screen.
- Press: End a call
Lock the screen
Light up the screen
- Press & hold: When mobile phone is off, power on the mobile phone.
When mobile phone is on, enter mobile phone options: Silent mode, Airplane mode, Power off.
- Press to adjust the Volume (in call/media playing mode)
- Open Search bar for searching within an application, the mobile phone or web.

1.2 Getting started

1.2.1 Set-up

- Removing or installing the back cover**
- Inserting or removing the SIM card**
- You must insert your SIM card to make phone calls. Please power off your mobile phone and remove battery before inserting or removing the SIM card.
- Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.
- Installing and removing the MicroSD card**
- To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

4

1.4 Applications list

The Applications list contains all pre-embedded and newly installed applications.

To access the Applications list, touch Application tab from Home screen. To return to Home screen, press **Home** key.

1.4.1 Normal mode and sort mode

Applications can be managed in two modes. To switch between two modes, press **Menu** key from applications list screen, and touch **Switch view**.

Normal mode (default)

All applications are listed in alphabetical order.

Sort mode

All applications are sorted by several categories.

1.4.2 Categories management⁽¹⁾

There are 8 categories in total: 5 categories is predefined, 3 categories can be added.

Press **Menu** key, and select **Edit** to enter edit mode. Within edit mode you can now customize categories.

2 Text input

2.1 Using Onscreen Keyboard

Onscreen keyboard will display automatically when a program requires entering text or numbers.

Onscreen keyboard settings


Press **Menu** key from Home screen, select **Settings\Language & keyboard\Android keyboard**, a series of settings are available for your selection. You could scroll the keyboard to change keyboard style.

14


⁽¹⁾ For more information, please view the complete user manual.

The MicroSD card may contain some third party applications.

Installing or removing the battery

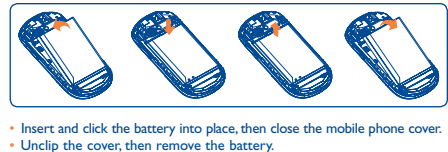

Charging the battery

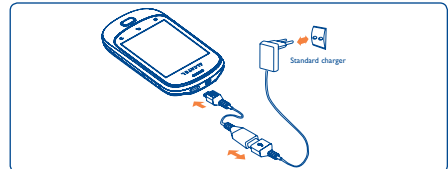

Connect the battery charger to your mobile phone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.


5

1.2.2 Power on your mobile phone

Hold down the **Power** key until the mobile phone powers on. It will take some seconds before the screen lights up.

Set up your mobile phone for the first time

The first time you power on the mobile phone, you are required to touch the Android logo to begin and then sign into your Google account to synchronize email, contacts, calendar and other Google applications⁽¹⁾.

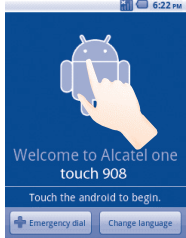

- Enter your user name and password, then touch **Sign in**. If you forget your password, you can go to <http://www.google.com/> to retrieve it. If you don't own a Google Account, you are prompted to create one by touching **Create**.
 - Read the setup information on the screen.
 - Mark/Unmark the check box to choose whether you want to take advantage of Google's location service, then touch **Next**.
 - Set up the date and time, then touch **Next**.
 - Touch **Finish setup**.
- This initial set up can be skipped and enabled via **Settings\Accounts & sync**.
- In power on screen without SIM card inserted, you can also connect to a Wi-Fi network to sign into your Google account and to use some features.

⁽¹⁾ Application availability depends on country and operator.


6

3 Phone call

3.1 Placing a call

User can easily launch a call using **Phone**. Enter this menu using one of the following two ways:

- Touch **Phone** from Home screen.
- Touch Application tab from Home screen and select **Phone**.

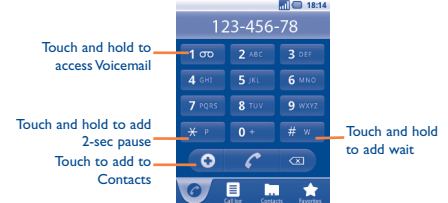

2.2 Text editing

You can edit the text you have entered.


- Touch and hold text you have entered
- Options list pops up
- Select the operation you need (**Select all**, **Select text**, **Cut all**, **Copy all**, etc.)

Enter the desired number from keyboard directly or select a contact from **Contacts**, **Call log** or **Favorites** by touching tabs, then touch to place the call. The number you entered can be saved to **Contacts** by pressing **Menu** key and touching **Add to Contacts** or touch **CS**. If you make a mistake, you can delete the incorrect digits by touching **CS**.

To hang up a call, press **Power** key.

15

3.2 Answering or rejecting a call

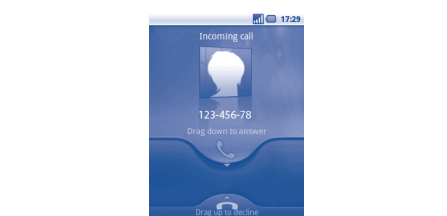

When you receive an incoming call, drag down the green mobile phone icon to answer; Hang up the call by pressing **Power** key.

3.3 Consulting your call memory

You can access your call memory by touching Application tab from the Home screen and touching **Call log** to view call history in categories of **Missed calls**, **Outgoing calls**, and **Incoming calls**.


16

1.2.3 Power off your mobile phone

Hold down the **Power** key from the Home screen until the mobile phone options appear, select **Power off**.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your home screen for quick access. Press **Home** key to switch to Home screen.

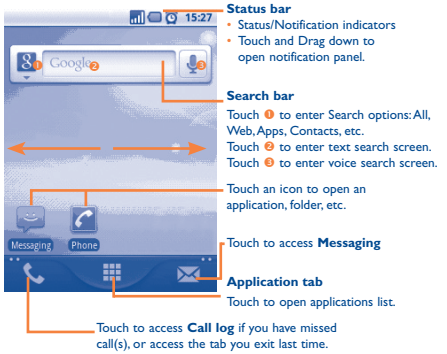

Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. Small dots at the lower left and right of the screen indicate which screen you are viewing.

Touch & hold the small dots, Application tab to display thumbnails, touch the thumbnail to open it. Press **Back** key or touch an empty area to return to Home screen. You can customize the number of home screens by **Settings\Home screen settings**.

7

4.2 Importing ,exporting and sharing contacts

From Contacts screen, press **Menu** key to open contacts list option menu, touch **Import/Export**, then select **Import from SIM card**, **Export to SIM card**, **Import from SD card** or **Export to SD card** or **Share visible contacts**.

To import/export a single contact from/to SIM card, touch the contact you want to import/export, then touch **OK** to confirm.

To import/export all contacts from/to SIM card, mark **Select all** check box, then touch **OK** to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, MMS, Email, etc.

Touch a contact you want to share, press **Menu** key and touch **Share** from contact details screen, then select the application to perform this action.

4.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your mobile phone.

5 Messaging

You can create, edit and receive SMS and MMS with this mobile phone.

To access this feature, touch Application tab from Home screen, then select **Messaging**.

All messages you receive or send out can only be saved in phone memory. To consult messages stored in SIM card, press **Menu** key from Messaging screen, then touch **Settings\Manage SIM messages**.

-

17

1.3.1 Using the touchscreen

Touch
To access an application, touch it with your finger.

Touch and Hold
To enter the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold this contact, options list will then appear on screen.

Drag
Place your finger on the screen to drag an object to another location.

Slide/Swipe
Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Flick
Similar to swiping, but flicking makes it move quicker.

Pinch/Spread
Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate

Automatically change the screen orientation from portrait to landscape by turning the mobile phone sideways to have a better screen view.

1.3.2 Status bar


From status bar, you can view both mobile phone status (to the right side) and notification information (to the left side). When the status bar is full, "G" icon will appear; touch to display hidden icons.

You can touch twice an empty area on the Home screen to hide/show the Status bar.

8

5.1 Write message

On message list screen, touch **New message** to write text/multimedia messages.

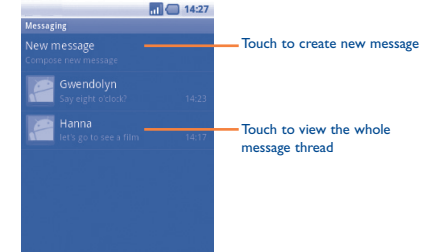

Sending a text message

Enter mobile phone number of the recipient on **To** bar or touch **CS** to add recipients, touch **Type** to **compose** bar to enter the text of the message. When finished, touch **Send** to send the text message.

An SMS of more than 160 characters will be charged as several SMS. Specific letters (accent) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations (show as static, not dynamic), slides and sounds to other compatible mobiles and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses added.

-

18

Status icons

	GPRS connected		GPS is on
	GPRS in use		Receiving location data from GPS
	GPRS is disabled		Speakerphone is on
	EDGE connected		Roaming
	EDGE in use		No signal
	EDGE is disabled		No SIM card installed
	3G connected		Vibrate mode
	3G in use		Ringer is silenced
	3G is disabled		Mobile phone microphone is mute
	HSPA (3G+) connected		Battery is very low
	HSPA (3G+) in use		Battery is low
	HSPA(3G+) is disabled		Battery is partially drained
	Connected to a Wi-Fi network		Battery is full
	Bluetooth is on		Battery is charging
	Connected to a Bluetooth device		Headset connected
	Airplane mode		Signal strength
	Alarm is set		Bluetooth headset battery level indicator

9

6 Getting connected

To connect to the Internet with this mobile phone, you can use the 3G networks or Wi-Fi, whichever is most convenient.

6.1 Connecting to the Internet

6.1.1 GPRS/EDGE/3G

The first time you turn on your mobile phone with SIM card inserted, it will automatically configure 3G network service.

To check the network connection you are using, press **Menu** key on Home screen, then touch **Settings\Wireless & networks\Mobile networks\2G/3G options\Network operators** or **Access Point Names**.

6.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your mobile phone is within range of a wireless network. Wi-Fi can be used on mobile phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Press **Menu** key from Home screen.
- Touch **Settings\Wireless & networks\Wi-Fi**.
- Mark/Unmark the checkbox to turn on/off Wi-Fi.
- Touch **Wi-Fi settings**. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact network operator for details). When finished, touch **Connect**.

19



6.2 Browser.....

Using Browser, you can enjoy surfing the Web.

To access this function, touch Application tab from Home screen, then touch **Browser**.

To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch **Go**.

6.3 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your mobile phone's MicroSD card and the computer.

To connect/disconnect your mobile phone to/from the computer

To connect your mobile phone to the computer:

- Use the USB cable that came with your mobile phone to connect the mobile phone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notifications panel and touch **USB connected**.
- Touch **Mount** in the dialog that opens to confirm that you want to transfer files.

To disconnect:

- Unmount the microSD card on your computer.
- Open the Notifications panel and touch **Turn off USB storage**.
- Touch **Turn off** in the dialog that opens.

To locate data you have transferred or downloaded in your MicroSD card:

- Touch Application tab from Home screen to open the applications list.
- Touch **File Manager**.

All data you have downloaded are stored in **File Manager**, where you can view media files (videos, photos, music and others), rename files, install applications into your mobile phone, etc.

21

6.4 Sharing your mobile phone's mobile data connection

You can share your mobile phone's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your mobile phone into a portable Wi-Fi hotspot.

To turn on USB tethering or Portable Wi-Fi hotspot

- Press **Menu** key from Home screen.
- Touch **Settings|Wireless & networks|Tethering & portable hotspot**.
- Mark the check box of **USB tethering** or **Portable Wi-Fi hotspot** to activate this function.


The functions may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

7 Locate my location using GPS satellites.....

To activate your mobile phone's global positioning system (GPS) satellite Receiver:

- Press **Menu** key from Home screen
- Touch **Settings|Location & security|Use GPS satellites**
- Mark the checkbox

 When open Maps, you can find your location:



31

Use your mobile phone's GPS satellites receiver to pinpoint your location within an accuracy as close as several meters ("street level"). The process of accessing the GPS satellite and setting your mobile phone's precise location for the first time will require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location.

8 Data backup.....

This mobile phone enables you to back up your mobile phone's settings and other application data to Google Servers, with your Google Account. If you replace your mobile phone, the settings and data you've backed up are restored onto the new mobile phone the first time you sign in with your Google Account.

To activate this function:

- Press **Menu** key from Home screen
- Touch **Settings|Privacy|Back up my data**
- Mark the checkbox

When this function is activated, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary you configure with the Settings application. If you deactivated this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

With this mobile phone, some built-in Google applications and other third party applications are available for your convenience.

With the built-in applications, you can

- Communicate with friends
- Exchange messages or emails with friends
- Track your location, view traffic situations, search for locations and get navigation information to your destination
- Download more applications from Android Market

and more.

For more information about these applications, please check user manual online: www.alcatelnetouch.com.

22

LICENCES



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

one touch 908A/one touch 908S Bluetooth QD ID B017986

The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

Google, the Google Logo, Android, the Android logo, Google Search, Google Maps, Gmail, YouTube, Android Market, Google latitude and Google Talk are trademarks of Google Inc.

Hearing Aid Compatibility

Your mobile phone is rated: "For Hearing Aid", to assist hearing device users in finding mobile phones that may be compatible with their hearing devices.

one touch 908A is HAC M3 & T3 compatible.
one touch 908S is HAC M3 & T3 compatible.
For more information please refer to "Hearing Aid Compatibility with Mobile Phones" leaflet or visit our website www.tctmobile.com.

32

9 Factory data reset

To activate factory data reset:

- Press **Menu** key from Home screen
- Touch **Settings|Privacy|Factory data reset**
- Mark the checkbox

Phone reset will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the mobile phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the mobile phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your mobile phone, there is another way to perform a factory data reset by using hardware keys. Hold down **Volume up** key and press **Power** key at same time until the screen lights up ⁽¹⁾.

10 Applications.....

It allows you to easily import photos from PC or the handset and organize them in different albums for better management.

It allows you to insert video files from PC for playback and then upload to handset folder.

It allows you to quickly search your Favorites in PC, manage the ultimate Library, and enjoy the easiest digital jukebox in your own mobile way.

It allows you to import downloaded mobile applications and have them installed into your handset upon synchronization.

For more information about these applications, please check user manual online: www.alcatelnetouch.com.

23

General information

- **Website:** www.alcatelnetouch.com
- **Facebook:** <http://www.facebook.com/alcatelnetouchusa>
- **Twitter:** <http://www.twitter.com/alcatel1touch>
- **Hot Line Number:** In the event you need hardware service please contact your wireless carrier or contact Alcatel at 1-888-841-5371.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelnetouch.com

Your mobile phone is a transceiver that operates on following networks: one touch 908A: GSM in quad-band (850/900/1800/1900 MHz) or UMTS in UMTS in AWS 1700 MHz, and 2100 MHz

one touch 908S: GSM in quad-band (850/900/1800/1900 MHz) or UMTS in UMTS in AWS 1700 MHz, and 2100 MHz

Protection against theft ⁽¹⁾

Your mobile phone is identified by an IMEI (mobile phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your mobile phone by entering **#066#** and keep it in a safe place. It may be requested by the police or your operator if your mobile phone is stolen.

Disclaimer

There may be certain differences between the user manual description and the mobile phone's operation, depending on the software release of your mobile phone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

Removal or altering of the wireless devices event labels or serial numbers (IMEI);
• Damage from exposure to water or other liquids, moisture, humidity, excessive temperatures or extreme environmental conditions, sand, excess dust and any condition outside the operating guidelines;
• Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts.

⁽¹⁾ Contact your network operator for service availability.

33

11 Making the most of your mobile phone ...

You can download software upgrade for free from the website: www.alcatelnetouch.com.

11.1 PC suite

The PC suite includes:

• Contacts

It allows you to back up contact entries so that you don't have to worry about losing, breaking, switching mobile phone or changing service providers.

• Messages

It frees you from painstakingly inputting text on the keypads. All of your messages are easily accessible and well-organized.

• Photos

It allows you to easily import photos from PC or the handset and organize them in different albums for better management.

• Videos

It allows you to insert video files from PC for playback and then upload to handset folder.

• Music

It allows you to quickly search your Favorites in PC, manage the ultimate Library, and enjoy the easiest digital jukebox in your own mobile way.

• Application

It allows you to import downloaded mobile applications and have them installed into your handset upon synchronization.

24

Alcatel Mobile Phones

Limited Warranty

TCT Mobile North America LTD warrants to the original retail purchaser of this wireless device, that should this product or part thereof during normal consumer usage and condition, be proven to be defective in material or workmanship that results in product failure within the first twelve (12) months from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) at the company's option without charge for parts or labor directly related to the defect(s).

Batteries, power adapters, and other accessories sold as in box items are also warranted against defects and workmanship that results in product failure within the first six (6) months period from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) and the company's option without charge for parts or labor directly related to the defect(s).

The limited warranty for your wireless device will be voided if any of the following conditions occur:
• Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your mobile phone is used;
• Connection to any equipment not supplied or not recommended by TCT Mobile;
• Modification or repair performed by individuals not authorized by TCT Mobile or its affiliates;
• Acts of god such as Inclement weather, lightning, power surges, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation;
• Removal or altering of the wireless devices event labels or serial numbers (IMEI);
• Damage from exposure to water or other liquids, moisture, humidity, excessive temperatures or extreme environmental conditions, sand, excess dust and any condition outside the operating guidelines;
• Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts.

34

• **File**
It allows you to organize Handset files with just a few clicks and files on the Handset can be at where you want them to be.

• Sync

It allows you to synchronize the Contacts and Calendar in Outlook/Outlook Express and handset.

Supported Operating Systems

Windows XP/Vista/Windows 7.

11.2 One touch Upgrade

Using One touch Upgrade tool you can update your mobile phone's software from your PC.

Download One touch Upgrade from ALCATEL website (<http://www.alcatelnetouch.com/>) and install it on your PC. Launch the tool and update your mobile phone by following the step by step instructions (refer to the User Guide provided together with the tool). Your mobile phone's software will now have the latest software.

All personal information will be permanently lost following the update process. We recommend you backup your personal data using PC Suite before upgrading.

25

Troubleshooting.....

Before contacting the aftersales department, you are advised to follow the instructions below:
• You are advised to switch off the mobile phone from time to time to maintain optimal performance.
• You are advised to fully charge (100%) the battery for optimal operation.
• Avoid storing large amounts of data in your mobile phone as this may affect the performance of your mobile phone.

and carry out the following checks:

My mobile phone can not switch on

- Press **[]** until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your mobile phone back on

My mobile phone has not responded for several minutes

- Press the **[]** key
- Remove the battery and re-insert it, then switch the mobile phone back on

My mobile phone turns off by itself

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level

My mobile phone will not charge properly

- Make sure you are using an Alcatel battery and charger provided in the box
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure that your battery is not completely discharged: If the battery is flat, it may take around 20 minutes to display the battery charge indicator on the screen
- Make sure charging is carried out under normal conditions (0°C (32 °F) +40°C (104 °F))
- When abroad, check that the electrical current is compatible

My mobile phone can not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually
- Try connecting at a later time if the network is overloaded

26



Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your mobile phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

27

Safety and use.....

We recommend that you read this chapter carefully before using your mobile phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

•TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile phone when the vehicle is not parked. Check the laws and regulations on the use of wireless mobile phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your mobile phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your mobile phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your mobile phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from mobile phone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the mobile phone from time to time to optimize its performance. Remember to abide by local authority rules of mobile phone use on aircrafts.

Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow Instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight. Switch the mobile phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile phones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the mobile phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

28

SIM card error

- Make sure the SIM card has been correctly inserted
- Verify with your operator that your SIM card is 3V, 1.8V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialled a valid number and press the **[]** key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls

Unable to receive incoming calls

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls

The caller's name or number does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

I cannot find my contacts

- Make sure your SIM card is correctly inserted
- Import all contacts stored in SIM card to mobile phone

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the Volume key
- Check the signal strength level **[]**

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service

I am unable to add a contact in my directory

- Make sure that your mobile phone memory is not full; delete some contacts or save the contacts in the product directory (i.e. your professional or personal directories)

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

29

When the mobile phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the mobile phone you should hold it against the ear on the opposite side to the device, if any. Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider. To avoid hearing impairment, answer the call before holding your mobile phone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage. It is recommended to have proper supervision while small children use your mobile phone.

When replacing the cover please note that your mobile phone may contain substances that could create an allergic reaction. Always handle your mobile phone with care and keep it in a clean and dust-free place.

Do not allow your mobile phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).

Over 55°C (131°F) the legibility of the mobile phone's display may be impaired, though this is temporary and not serious. Do not open or attempt to repair your mobile phone yourself. Do not drop, throw or try to bend your mobile phone.

Do not use the mobile phone if the glass made screen, is damaged, cracked or broken to avoid any injury. Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your mobile phone model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries. Your mobile phone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products. Remember to make back-up copies or keep a written record of all important information stored in your mobile phone. Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your mobile phone or enabling a flashing-lights feature on your mobile

phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the mobile phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.
- When you play games on your mobile phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:
 - Take a minimum of a 15-minute break every hour of game playing.
 - If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
 - If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.
- Prolonged exposure to music at full volume using the music player may damage your hearing. Set your mobile phone's volume to its lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and its affiliates.

30

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered
- Try later if the network is busy

I am unable to send and receive MMS

- Check your mobile phone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters
- Verify the server center number or your MMS profile with your operator
- The server center may be swamped; try again later

"No service" is displayed

- You are outside of the network coverage area

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to connect my mobile phone to my computer

- Install Alcatel's PC suite first of all
- Open Notification panel to check if the PC Suite Agent has activated
- Check that you have marked the checkbox of USB debugging in **Settings|Applications|Development|USB debugging**
- Check that your computer system meets the requirements for Alcatel's PC Suite installation

I am unable to download new files

- Check for free space of your MicroSD card
- Delete some files
- Check your subscription status with your operator

The mobile phone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your mobile phone is visible to other users

How to make your battery last longer

- Make sure you followed the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request
- Extend email auto-check interval as long as possible
- Exit background-running applications if they are not being used for a long time
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use

31

phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the mobile phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.
- When you play games on your mobile phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:
 - Take a minimum of a 15-minute break every hour of game playing.
 - If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
 - If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.
<